


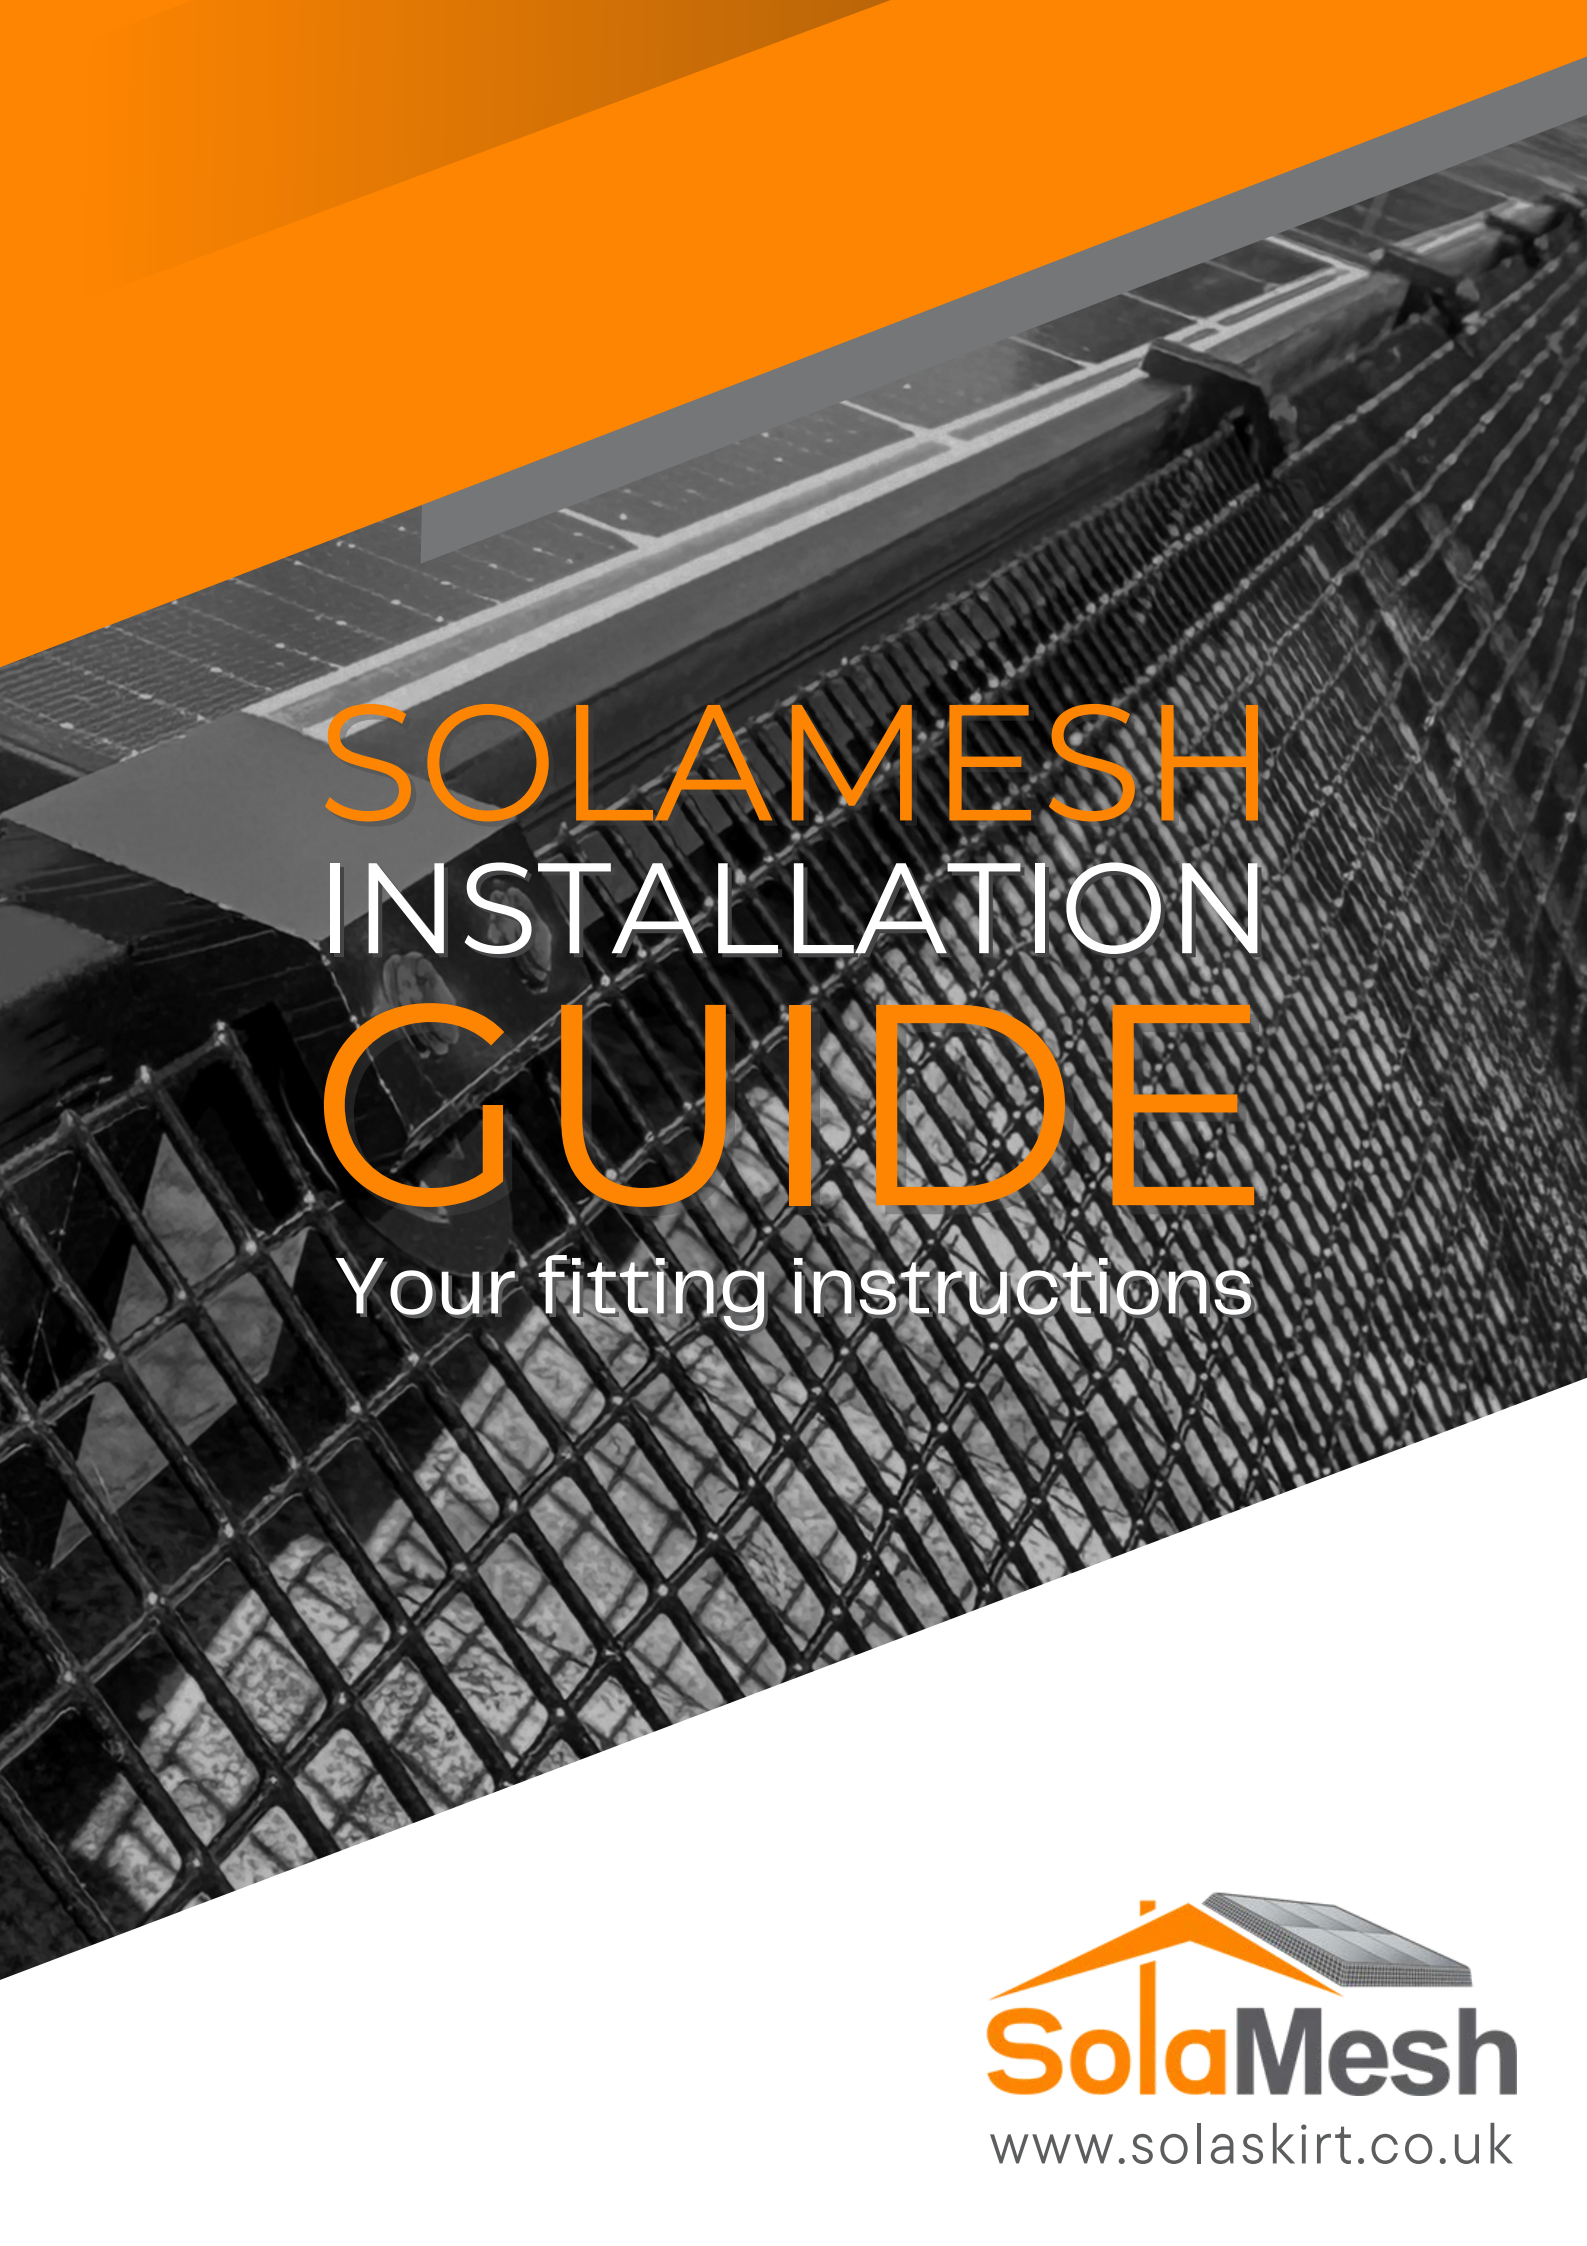

SOLAMESH INSTALLATION GUIDE

Your fitting instructions



CUT THE MESH

Cut the mesh to approx. 2m lengths on the ground, so it's easier to work with at height.


01



FIT THE CLAMPS

Fit a clamp 5cm from the corner of the frame, using the supplied allen key, then alternate single/double clamps at 50cm – 60cm intervals.


02

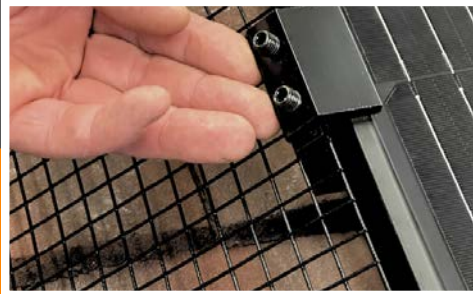

SECURE THE MESH

Fit the mesh into the clamps so it's sitting at a 45 degree angle, allowing for overhang on the corners.


03

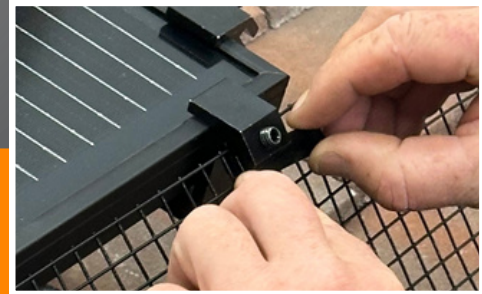

ADD THE SHIMS

Put the shim in the mouth of the clamp, above the mesh, then clamp with the grub screws.


04

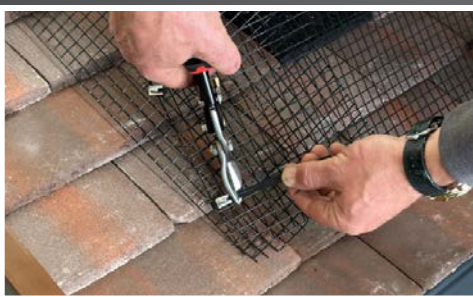

FIT THE CORNERS

Wrap the mesh around the corner, then use the metal cable ties to secure it.

05

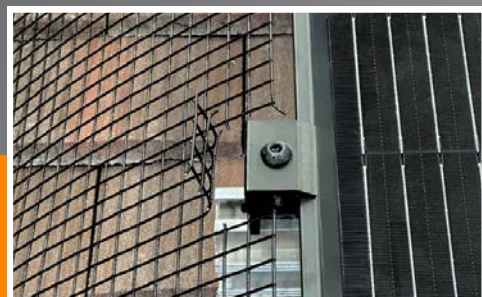

CUT ROUND END CLAMPS

Cut the mesh to fit around the end clamps, so it doesn't warp.

06



SOLAMESH

More information

SolaMesh clamps fit all solar panels, including panels without a lip and the Trina Vertex box profile.

KIT INCLUDES:

- 30m roll of black mesh
- 30 x double clamps
- 30 x single clamps
- 60 x shims
- 20 x cable ties
- 2 x allen keys

TOOLS REQUIRED:

- Tin snips


SolaMesh is quick and easy to install, but if you're ever looking for guidance, we're always here to help.



Clamps




Allen keys

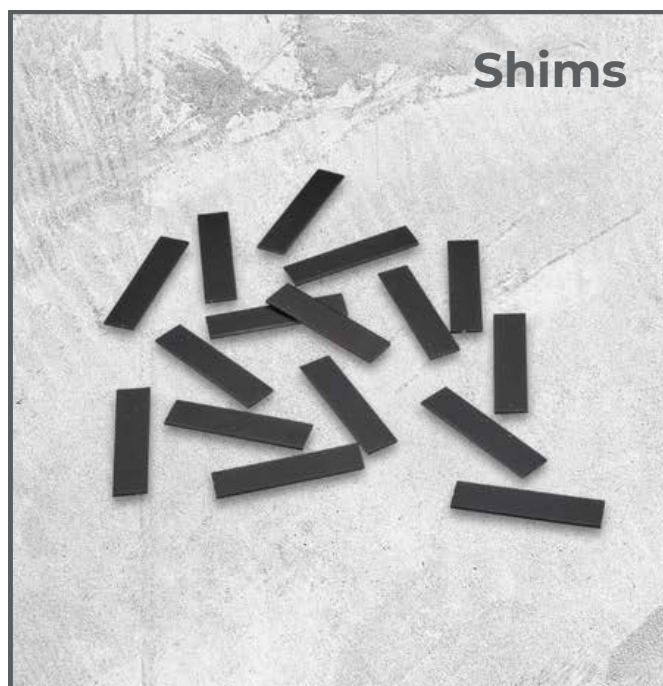

Shims



Mesh

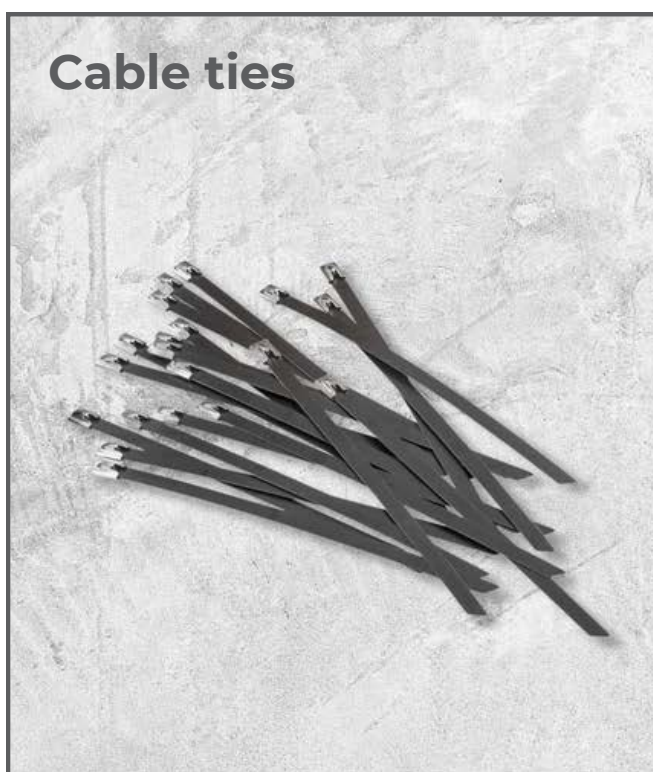

Cable ties

**WHAT'S IN
YOUR KIT**



For our installation videos visit:
www.youtube.com/@solaskirt